

Description:	Section	Page
Safety regulations	D-01-1	03
Technical data	D-01-2	04
Safety mechanisms	D-02	05
Loading the magazine	D-03	06
Loading the pistol	D-04	07
Firing	D-05-1	08
Decocking the hammer	D-05-2	08
Pistol with empty magazine	D-05-3	08
Unloading your pistol	D-05-4	09
Disassembly and reassembly of the pistol	D-05-5	09
Cleaning	D-06 1	10
Repair	D-06-2	10
Warranty for ISSC weapons	D-06-3	10
Shooting blank ammo	D-07	11
Shooting pepper gas ammo	D-08	11

D-01-1 safety regulations:

- Never use the gun under the influence of drugs or alcohol, while ill or suffering other such difficulties. These conditions can impair your powers of judgement and reflexes.
- Always think the gun as being loaded and with the safety off until you have established the opposite through the unloading procedure.
- Always keep the muzzle of the gun in a safe direction while handling. A safe direction is towards an area where there are no people, other life forms or property that is not a recognized target. Identify your target and the area behind it beyond any doubt.
- If you don't intend to shoot, keep your finger away from the trigger
- Never aim at yourself or other life forms
- only use 9mmPAK ammunition with CIP approval
- Never transport a loaded pistol. Only load if you intend to fire your pistol.
- Wear safety glasses while shooting
- Always keep the gun and the ammunition separate from one another, and ensure that neither is obtained by unauthorized persons or children.
- Handing over this pistol to people under the age of 18 is prohibited.
- Modifications on the pistol are not allowed . Only a gunsmith is qualified to do any repairs.
- Never give a loaded gun out of your hands or hand it over to another person
- Firing a blank gun is only allowed under the following circumstances by the holder of the domestic authority or with his/ her approval;
 - Security reasons
 - Rescue exercises
 - For self defense
 - State of emergencies
- Never let a loaded gun out of your hand or hand over a loaded gun

D-01-2 technical detail

Included in the standard delivery are:

- 1 x pistol
- 1x key for the trigger
- 1 x magazine
- 1 x handbook
- 1 x hardcase

Caliber	9mm PAK
Action	SA (single action)
Overall length	181mm
Overall height	127 mm
Overall width	27,5 mm
Weight without magazine	approx.. 680 gramm
Magazine capacity	8+1 rounds

D02: Safety mechanisms.

1. Manual safety/Decocker

To engage the safety, turn the safety lever, as shown in fig.1, to the lower position. Hammer gets decockered.

To release the gun again, put the safety lever back in the higher position (fig. 2). If you can see the red dot, you can cock the hammer and the pistol is ready to fire again.

CAUTION: Always keep the manual safety engaged until you intend to fire the gun.

2. Trigger safety and hammer safety

Your gun has another safety built in the trigger. As long as the trigger is not pulled properly and intentionally the safety lever in the trigger won't be disengaged, . Additionally there is a lock at the trigger.

NEVER RELY SOLELY ON MECHANICAL SAFETIES - always be extremely careful and avoid situations which could lead to an accident.

D-03: Loading the Magazine:

Procedure:

1. Put the cartridge on the feeder, near the magazine feed lips. (fig. 3)
2. Pull down the spring of the magazine.
3. Push the cartridge to the backside of the magazine.
4. Load only the quantity of cartridges into the magazine, you want to fire. (max. 8 bullets)

Notice:

Use the side-mounted button to press the follower down and insert a cartridge under the magazine lips

Do not use force.

Damaged magazine lips will cause malfunctions and will render the weapon useless.

Tap the back of the loaded magazine against the palm of your hand.

Properly positioned cartridges inside the magazine help to prevent stoppages.

When a magazine is to be emptied, remove the cartridges one after the other by pushing them to the front side of the magazine.

D-04: Loading the pistol

CAUTION: Read and understand the operating instructions thoroughly before you load your gun.

Engage safety (see chapter D-02)

Press magazine catch and remove empty magazine (fig. 4).

Load the magazine (see chapter D-04-3) (fig.5)

Push the loaded magazine into the magazine well until the magazine catch locks it (fig. 6).

Loading the chamber with the first cartridge

Pick up the gun with your shooting hand, hold it at an angle of approx. 45 degrees and point the muzzle in a safe direction. Use other hand to retract slide. Release slide. The slide travels forward and inserts the first round into the chamber. The hammer is now cocked and ready to fire.

CAUTION! Your gun is now ready to fire. Regard safety instructions, keep shooting finger away from trigger until you really intend to fire.

If you do not fire your gun immediately after loading it, decock hammer.

D05-1 firing.

The pistol is only single action. To fire it „single action“ means that the gun is loaded and that the hammer is manually cocked before firing (see chapter D-04-6)

The action of the slide then automatically reloads the pistol and cocks the hammer.

D05-2 decocking

To decock the gun from a loaded and cocked state, press the safety lever down with your thumb into the safe position. See D-02. With this the gun gets de-cocked and the safety is engaged.

IMPORTANT: Never de-cock the gun by manually lowering the hammer from its fixed state into the de-cocked position. By doing so unintended firing could be the result.

D-05-3: Pistol with empty magazine:

After the last round was fired, the slide stop holds the slide in its opened position.

Engage the safety. In case you intend to commence shooting, replace empty magazine by a full one.

Press the slide stop lever (fig. 7), the slide will travel forward and load the chamber with the first round.

Keep your weapon in your shooting hand and keep it pointing in a safe direction so that there is no danger for other persons.

If shooting is not to commence, engage safety and decock hammer. Remove magazine and inspect the chamber, it must be clear. Close breech.

D-05-4: unloading your pistol

Engage safety. See chapter D-02. Remove magazine and retract slide. The round in the chamber is extracted and ejected.

Make a visual inspection of the barrel - it must be clear! fig. 8

Allow slide to travel forward and decock hammer.

D-05-5: Disassembly and reassembly of the pistol

It is not necessary to strip the pistol any further as is described in this manual.

Further disassembly, improper assembly and disregard of the instructions will lead to loss of warranty, and under no circumstances will the manufacturer then be liable for damages to persons or property.

To do so, engage the safety, remove the magazine and inspect the weapon, it must be unloaded.

Press the takedown lever down (on both sides) fig. 9(1).

Fully retract the slide, lift its rear section

and push forward off the receiver fig. 9(2).

Assembly of the gun is in reverse order

D06-1: cleaning:

Remove the slide (see fi. 4-11)

Only use gun oil, a brush and cleaning patches.

Don't use any steel brushes or other hard material to clean your gun.

Don't use any aggressive cleaner.

Always clean the gun after use

Clean the barrel, the chamber and the slide block as well as the magazine lips.

Clean the surface of the slide on the inner and outer side

D-06-2: repair:

A weapon which fails to function properly is dangerous. It should be safely kept in a way that prevents its use before it is repaired. It is difficult to repair a weapon, and improper assembly can lead to dangerous malfunctions.

Only let an authorized and qualified gunsmith inspect and repair your weapon!

D-06-3 warranty

This gun is warranted to be free from defects in material and workmanship. Any such defects of which we receive

written notice within one year from date of original purchase will be remedied without charge within a reasonable time

after such notification and delivery of the handgun. For reporting warranty issues, shipping information and any other

repair or service issues, please refer to the customer service information

on the **www.issc.at** website.

D-07 Firing of pyrotechnics with a pyrotechnic launcher

With the supplied pyrotechnic launcher you can shoot cal. 15mm pyrotechnical ammo. Only use the supplied pyrotechnic launcher.

Screw the pyrotechnic launcher onto the barrel thread. Load the pistol (see D-04-6). Put the ammo with the open black end of the casing into the pyrotechnic launcher.

Caution: reach out your hand vertically above your head with the muzzle pointing upwards whilst firing.

D-08 Firing of pepper gas ammo:

Besides firing blank ammo, you can also shoot pepper gas ammo. For shooting, please read the chapter above. After shooting make sure that you get away of the area covered by the pepper gas as fast as possible to avoid breathing in the substances.

D-09: shooting permit and carrying of blank guns

Firing a blank gun is only allowed under the following circumstances by the holder of the domestic authority or with his/ her approval;

- Security reasons
- Rescue exercises
- For self defense
- State of emergencies

Producer:

ISSC Handels GmbH
Furt 43
4754 Andrichsfurt

Exclusive importer Germany:

ESC GmbH
Am Rotbühl
89564 Nattheim
Germany
Tel.: + 49 7321 910773
Fax. + 49 7321 9107731
Email: office@escgmbh.biz
www.escgmbh.biz